USER MANUAL

Thinvent® Industrial PC IPC5

IPC5-i5_12-32_32-m2048-12_10-m-11O-0



Edition November 2026
Serial number: _____
Thinvent Technologies Private Limited · www.thinvent.in

Contents

1. Before you start	3
2. What is in the box	3
3. Specifications	3
4. Ports and controls	4
5. Setting up	4
6. Using the computer	4
7. Wi-Fi	4
8. Operating system	4
9. Inside the computer: the motherboard	5
10. Internal connectors and headers	6
11. Jumpers and switches	8
12. BIOS setup	9
13. Drivers	9
14. Care	9
15. Troubleshooting	9
16. Support	10

1. BEFORE YOU START

The IPC5 is a fanless and ventless industrial PC in a dark grey anodised aluminium housing with serrated fins, 197 mm × 210 mm × 65 mm. It is built for 24/7/365 operation and supports wall mounting and DIN rail mounting. Customers use it for industrial automation, machine vision, process control, digital signage, edge computing and AI inference. It has serial ports for connecting sensors and machines.

- Keep the vents clear, and keep the computer away from water and direct sunlight.
- Use only the power adapter supplied with the IPC5. A device run on a different adapter can lose its warranty.

Drivers, other files for this computer and the latest edition of this manual are on the Thinvent Support Downloads page: www.thinvent.in/support/downloads. Enter the serial number or the order number of your computer.

2. WHAT IS IN THE BOX

- Thinvent® Industrial PC IPC5
- Power adapter

3. SPECIFICATIONS

Processing

Generation	12th
Series	i5
Processor Brand	Intel
Processor Model	1240P
Cores	12
Max Frequency	4.4 GHz
Cache	12 MB
Main Memory	64 GB
SSD Storage	2048 GB

Display

HDMI	1
VGA	1

Audio

Speaker Out	1
Mic In	1
Front Speaker Out	1
Front Mic In	1

Connectivity

USB 3.2	2
USB 2.0	2
Front USB 2.0	4
Front Serial Port	2 DB9 male RS232

Networking

Ethernet	1000 Mbps
Wireless Networking	Wi-Fi 5 (802.11ac), dual band

Power

DC Voltage	12 Volts
DC Current	10 Amps
Power Input	100~275 Volts AC, 50~60 Hz, 1.5 Amps maximum
Cable Length	2 Metre

Environmental

Operating Temperature	0°C ~ 50°C
Operating Humidity	20% ~ 80% RH, non condensing
Certifications	RoHS, ISO

Physical

Form Factor	Industrial PC
Thermal Design	Fanless Passive Cooling
Dimensions	197mm × 210mm × 65mm
Housing Material	Aluminium
Housing Finish	Anodised
Housing Colour	Dark Grey
Net and Gross Weight	2.92kg, 3.72kg

Operating System

Operating System	Microsoft Windows 11 Professional

4. PORTS AND CONTROLS

Front

From left to right:

#	Port	Description
1	USB 2.0 ports (4)	USB 2.0 ports for a keyboard, a mouse or a USB stick.
2	Serial ports (2)	DB9 male RS-232 serial ports.

Rear

From left to right, seen from the back:

#	Port	Description
1	DC-IN	12 V to 19 V DC input, 5.5 × 2.5 mm
2	HDMI	HDMI 2.0 port, up to 4096 × 2304 at 60 Hz
3	VGA	VGA port, up to 1920 × 1200 at 60 Hz
4	USB 2.0 × 2	Two stacked USB 2.0 ports
5	LAN	RJ45 Gigabit Ethernet port, Realtek RTL8111H
6	USB 3 × 2	Two stacked USB 3 ports
7	MIC	3.5 mm microphone input (pink)
8	LINE	3.5 mm line output (green)

5. SETTING UP

Connect and switch on

1. Connect the HDMI cable or the VGA cable from the IPC5 to the screen.
2. Connect the keyboard, the mouse and any other device.
3. Connect the power adapter to the IPC5 and plug it into the mains.
4. Switch on the screen and wait for the IPC5 to start.

6. USING THE COMPUTER

Use the serial ports

1. Connect the serial device to a DB9 port of the IPC5.
2. In Windows, open Device Manager and read the COM port number of that port. In a terminal program such as PuTTY, select that COM port.
3. If a COM port does not respond, restart the IPC5 and press Del to open BIOS setup.
4. In BIOS setup, set the type of each COM port you use. The serial ports are RS-232. On some boards, COM1 can also be set to RS-422 or RS-485 in BIOS setup.
5. Press F10 to save and exit, then connect to the COM port again.

7. WI-FI

This computer has Wi-Fi (Wi-Fi 5 (802.11ac), dual band).

1. Click the network icon at the right end of the taskbar.
2. Click the name of your Wi-Fi network, then Connect, and type the network password.


8. OPERATING SYSTEM

This computer comes with Microsoft Windows 11 Professional.

1. Switch the computer on. Windows starts its setup on the first start.
2. Pick your country, keyboard layout and network, then sign in or create a local account.

3. Install the drivers in the Drivers chapter of this manual if Device Manager lists a device without a driver.

9. INSIDE THE COMPUTER: THE MOTHERBOARD

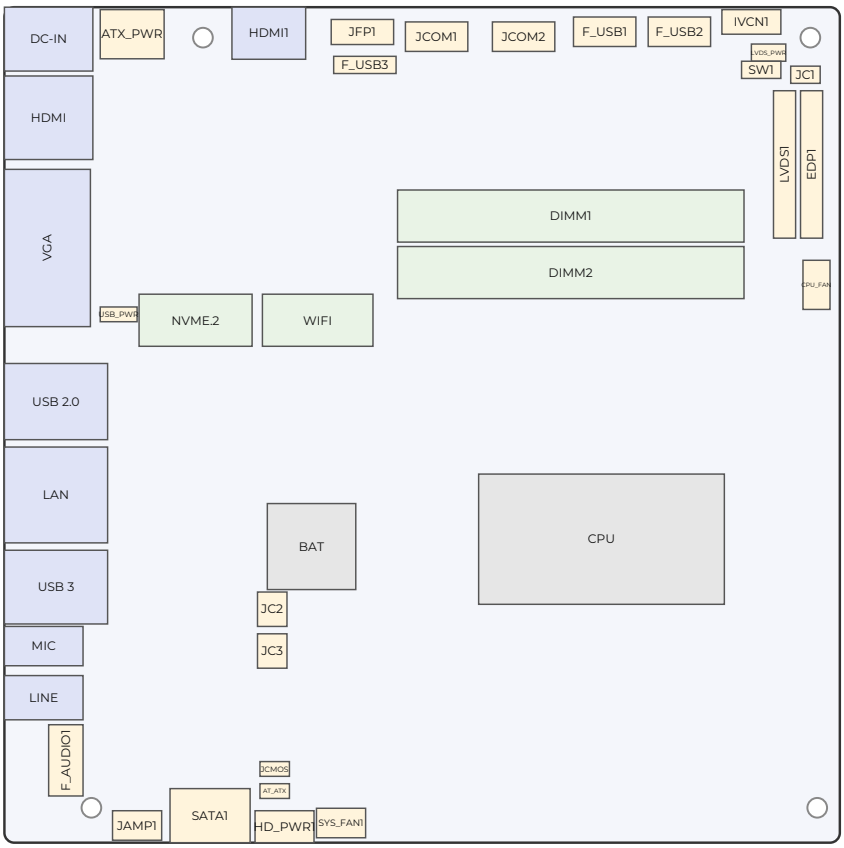

170 mm × 170 mm

Component side of the board. Positions are approximate.


Label	Connector or component
DC-IN	12 V to 19 V DC jack, 5.5 × 2.5 mm
HDMI	Rear HDMI 2.0 port
VGA	Rear VGA port
USB 2.0	Two rear USB 2.0 ports
LAN	RJ45 Gigabit Ethernet port
USB 3	Two rear USB 3 ports
MIC	Microphone input jack
LINE	Line output jack
F_AUDIO1	Front audio header, 2 × 5 pins
ATX_PWR	4-pin ATX power input
HDMI1	HDMI 2.0 port on the top edge
JFP1	Front panel header: LEDs, reset, power button
F_USB3	Front USB header, 1 × 5 pins
JCOM1	RS-232 serial header COM1
JCOM2	RS-232 serial header COM2
F_USB1	Front USB 2.0 header, 2 ports
F_USB2	Front USB 2.0 header, 2 ports
IVCN1	LVDS backlight power and control header
LVDS_PWR	LVDS and eDP screen voltage pins
SW1	LVDS resolution switch
JC1	Screen voltage jumper
LVDS1	LVDS screen header, 2 × 15 pins
EDP1	eDP screen header, 2 × 15 pins
DIMM1	DDR4 SO-DIMM slot

DIMM2	DDR4 SO-DIMM slot
NVME.2	M.2 slot for an NVMe or SATA SSD
WIFI	M.2 2230 slot for a Wi-Fi card
USB_PWR	Rear USB standby power jumper
CPU	Intel Core i5-1240P processor
BAT	CR2032 coin cell battery holder
JC2	Storage mode switch for the M.2 slot
JC3	Storage mode switch for the M.2 slot
JCMOS	Clear CMOS jumper
AT_ATX	Power-on-after-power-loss jumper
JAMP1	Speaker amplifier output header
SATA1	SATA 3.0 port
HD_PWR1	Hard disk power header, 12 V and 5 V

10. INTERNAL CONNECTORS AND HEADERS

JCOM1, JCOM2: Serial port headers

Two identical RS-232 headers, 2 × 5 pins at 2.54 mm. The pin table below applies to both.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI		

F_USB3: Front USB header

1 × 5 pins at 2.54 mm.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	VCC	2	D-
3	D+	4	GND
5	NC		

F_USB1, F_USB2: Front USB 2.0 headers

Two identical headers, 2 × 5 pins at 2.54 mm, each with two USB 2.0 ports. The pin table below applies to both.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	VBUS	2	VBUS
3	DATA0-	4	DATA1-
5	DATA0+	6	DATA1+
7	GND	8	GND
9	NC	10	GND

LVDS1: LVDS screen header

2 × 15 pins at 2.0 mm. Supports up to 1920 × 1080 at 60 Hz. Pin 1 of the screen cable goes on pin 1.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	VCC	2	VCC
3	VCC	4	GND
5	GND	6	GND
7	LVDS_U0_N	8	LVDS_U0_P
9	LVDS_U1_N	10	LVDS_U1_P
11	LVDS_U2_N	12	LVDS_U2_P
13	GND	14	GND
15	LVDS_CLKU_N	16	LVDS_CLKU_P
17	LVDS_U3_N	18	LVDS_U3_P
19	LVDS_L0_N	20	LVDS_L0_P
21	LVDS_L1_N	22	LVDS_L1_P
23	LVDS_L2_N	24	LVDS_L2_P
25	GND	26	GND
27	LVDS_CLKL_N	28	LVDS_CLKL_P
29	LVDS_L3_N	30	LVDS_L3_P

IVCN1: LVDS backlight header

1 × 6 pins at 2.0 mm. Powers and controls the screen backlight.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	+12V	2	+12V
3	ON/OFF (backlight switch)	4	ADJ (backlight brightness)
5	GND	6	GND

EDP1: eDP screen header

2 × 15 pins at 2.0 mm. Pin 1 of the screen cable goes on pin 1. The screen voltage is set with JC1, the same as for LVDS.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	VCC	2	VCC
3	GND	4	GND
5	EDP_TX0_P	6	EDP_TX0_N
7	GND	8	GND
9	EDP_TX1_P	10	EDP_TX1_N
11	GND	12	GND
13	EDP_TX2_P	14	EDP_TX2_N
15	GND	16	GND
17	EDP_TX3_P	18	EDP_TX3_N
19	GND	20	GND
21	EDP_AUX_P	22	EDP_AUX_N
23	GND	24	EDP_HPD
25	EDP_PWM	26	EDP_EN
27	GND	28	GND
29	+12V	30	+12V

F_AUDIO1: Front audio header

2 × 5 pins at 2.54 mm.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	MIC-L	2	GND
3	MIC-R	4	NC
5	LINE OUT-R	6	RET_R
7	SENSE	8	NC
9	LINE OUT-L	10	RET_L

JAMP1: Speaker amplifier header

1 × 4 pins at 2.0 mm. Outputs to a speaker through the onboard amplifier.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	L-	2	L+
3	R-	4	R+

JFP1: Front panel header

2 × 5 pins at 2.54 mm. Pins 1 and 3 are the hard disk LED, pins 2 and 4 the power LED, pins 5 and 7 the reset button, pins 6 and 8 the power button. Pin 1 and pin 2 are the LED positive pins.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	HDD_LED+	2	PWR_LED+
3	HDD_LED-	4	GND
5	GND	6	PWR_BTN#
7	RESET	8	GND
9	NC	10	NC

ATX_PWR: 4-pin ATX power input

2 × 2 pins. An alternative to the DC jack.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	GND	2	GND
3	+12V	4	+12V

SATA1: SATA 3.0 port

Standard 7-pin SATA data connector.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	GND	2	SATA_TXP
3	SATA_TXN	4	GND
5	SATA_RXN	6	SATA_RXP
7	GND		

HD_PWR1: Hard disk power header

1 × 4 pins at 2.54 mm. Use the standard power cable. Pin 1 supplies 12 V and pin 4 supplies 5 V.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	12V	2	GND
3	GND	4	5V

11. JUMPERS AND SWITCHES

JCMOS: Clear CMOS

Setting	Function
1-2	Normal operation (default)
2-3	Clear the CMOS and restore the BIOS factory values

AT_ATX1: Power on after power loss

Setting	Function
1-2	Power-on function off
2-3	Power-on function on: the board starts when power is applied

USB_PWR: Rear USB power when the computer is off

Setting	Function
1-2	Rear USB ports have no power when the computer is off
2-3	Rear USB ports have power when the computer is off

LVDS_PWM: Backlight PWM polarity

Setting	Function
1-2	Positive PWM signal
2-3	Inverted PWM signal

JC1: LVDS and eDP screen voltage

Setting	Function
1-2	3.3 V
3-4	5 V
5-6	12 V

JC2 and JC3: M.2 slot storage mode switches

Setting	Function
Position 1-3 (switch down)	NVMe SSD in the M.2 slot
Position 3-5 (switch up)	SATA SSD in the M.2 slot

SW1: LVDS screen resolution

Setting	Function
0000	1280 × 800, single channel, 6 bit
0001	800 × 600, single channel, 8 bit
0010	1024 × 600, single channel, 8 bit
0011	1024 × 768, single channel, 8 bit
0100	1024 × 768, single channel, 6 bit
0101	800 × 480, single channel, 8 bit
0110	1366 × 768, single channel, 6 bit
0111	1400 × 900, single channel, 8 bit
1000	1366 × 768, single channel, 8 bit
1001	1400 × 900, dual channel, 8 bit
1010	1280 × 1024, dual channel, 8 bit
1011	1400 × 1050, dual channel, 8 bit
1100	1600 × 900, dual channel, 8 bit
1101	1920 × 1080, dual channel, 6 bit
1110	1600 × 1200, dual channel, 8 bit
1111	1920 × 1080, dual channel, 8 bit

12. BIOS SETUP

Press **Del** right after power-on to open BIOS setup. Press **F11** to open the boot menu and pick a boot device once. Open the Save & Exit menu to save the settings and restart, or press **F10**. Press **F9** to load the default settings.

Updating the BIOS

> Keep the power connected during a BIOS update. A power cut during the update leaves the board unable to start.

1. Thinvent does not publish a BIOS file for this board on the Support Downloads page.
2. To update the BIOS, contact Thinvent support using the details in the Support section. Give the part id (i5_12 or i5_12l) and the BIOS version shown in BIOS setup.
3. Thinvent support sends the BIOS file and the steps for your board.
4. Use only the BIOS file that Thinvent support sends for this board.

13. DRIVERS

Install the drivers in this order. Each one is on the Support Downloads page.

#	Driver	Version
1	Intel Chipset INF Utility for Windows 10 and 11	10.1.20658.8883
2	Intel graphics driver (11th-14th Gen and N-series) for Windows 10 and 11	31.0.101.7092
3	Intel Ethernet driver (I219-V) for Windows 10 and 11	31.2.2
4	Realtek ALC897 audio driver (UAD) for Windows 10 and 11	9079
5	Realtek audio driver (UAD) for the i3-1215U board	6.0.9597.1
6	Realtek audio driver (UAD, DCH) and Intel Trace Hub driver for Windows 10 and 11	6.0.9239.1-dch
7	Realtek audio driver fix for the Core Ultra 5 board	rtk-audio-fix
8	Intel Bluetooth driver (Wireless-AC 8260, 8265, 9560 and Wi-Fi 6 AX200) for Windows 10 and 11	22.200.0
9	Intel Wi-Fi driver (Wireless-AC 8260, 8265, 9560 and Wi-Fi 6 AX200) for Windows 10 and 11	22.200.2
10	Intel Management Engine software and driver (CSME 15)	2052.15.0.2069
11	Intel Management Engine software and driver (CSME 16, Alder Lake-P)	2201.16.0.2645

14. CARE

- Keep the IPC5 in a place where the room temperature stays between 0°C and 50°C and the humidity stays between 20% and 80% RH, non condensing.
- Put the IPC5 in an open space. In a closed space the IPC5 can overheat and shut down.

15. TROUBLESHOOTING

The IPC5 shuts down several times a day

1. Open the Windows power plan settings and select the Performance power plan.
2. Place the IPC5 in an open space with air around its housing. A closed space can cause throttling.
3. If the IPC5 still shuts down or shows a blue screen, record the idle temperature of the device and send it to Thinvent support with the serial number.

The IPC5 is on but the screen stays blank

1. Switch off the IPC5 and unplug the power adapter.
2. Remove every cable from the IPC5.
3. Connect the HDMI cable first, then the power adapter. Do not connect the keyboard and mouse yet.
4. If the screen stays blank, try a different HDMI cable or the VGA port.
5. If the screen is still blank, contact Thinvent support with the serial number of the IPC5.

Nothing shows on the screen from the HDMI port after a Windows update

1. Connect the screen to the VGA port with a VGA cable.
2. Update Windows and the display driver.
3. Connect the screen to the HDMI port again after the update.

16. SUPPORT

Support Downloads	www.thinvent.in/support/downloads
Email	support@thinvent.in
Phone	+91-11-411-71494
WhatsApp	+91 9990344247

Thinvent® is a registered trademark of Thinvent Technologies Private Limited. Intel, Core, Celeron, AMD Ryzen, Microsoft and Windows are trademarks of their owners. The information in this manual is subject to change without notice.