USER MANUAL

Thinvent® 15" Industrial Panel PC

PPC15-i3_12l-32-m128-12_7-m-11P-KM



Edition November 2026

Serial number: _____

Thinvent Technologies Private Limited · www.thinvent.in

Contents

1. Before you start	3
2. What is in the box	3
3. Specifications	3
4. Ports and controls	4
5. Setting up	4
6. Using the computer	4
7. Wi-Fi	4
8. Operating system	4
9. Inside the computer: the motherboard	5
10. Internal connectors and headers	6
11. Jumpers and switches	9
12. BIOS setup	9
13. Drivers	9
14. Care	10
15. Troubleshooting	10
16. Support	10

1. BEFORE YOU START

The Thinvent 15 inch Industrial Panel PC is a computer and a 15 inch screen in one aluminium housing. It has no fan, it is cooled passively, and it is rated IP65. The screen is 1024 × 768 pixels, 350 nits, with a viewing angle of 178° horizontally and vertically. It suits the shop floor, control rooms and kiosks.

- Keep the vents clear, and keep the computer away from water and direct sunlight.
- Use only the power adapter that came with the panel PC.
- Save your work before you shut down. Unsaved work is lost.

Drivers, other files for this computer and the latest edition of this manual are on the Thinvent Support Downloads page: www.thinvent.in/support/downloads. Enter the serial number or the order number of your computer.

2. WHAT IS IN THE BOX

- Thinvent 15" Industrial Panel PC
- 12 V power adapter with a 2 metre cable

3. SPECIFICATIONS

Processing	
Generation	12th
Series	i3
Processor Brand	Intel
Processor Model	1215U
Cores	6
Max Frequency	4.4 GHz
Cache	10 MB
Main Memory	32 GB
SSD Storage	128 GB
Display	
Screen Size	15 inch
Resolution	1024 × 768
Brightness	350 nits
Viewing Angle	Horizontal 178°, Vertical 178°
HDMI	1
VGA	1
Audio	
Speaker Out	1
Mic In	1
Connectivity	
USB 3.2	2
RS485 Option	1
Networking	
Ethernet	1000 Mbps
Ethernet Ports	2
Wireless Networking	Wi-Fi 5 (802.11ac), dual band
Power	
DC Voltage	12 Volts
DC Current	7 Amps
Power Input	100~275 Volts AC, 50~60 Hz, 1.5 Amps maximum
Cable Length	2 Metre
Environmental	
Ingress Protection	IP65

Physical

Form Factor	Panel PC
Thermal Design	Fanless Passive Cooling
Dimensions	370mm × 290mm × 55mm
Housing Material	Aluminium
Net and Gross Weight	5.24kg, 5.82kg

Accessories

Keyboard and Mouse	1

Operating System

Operating System	Microsoft Windows 11 Pro

4. PORTS AND CONTROLS

Rear

From left to right, seen from the back:

#	Port	Description
1	DC-IN	12 V or 19 V DC power jack, 5.5 × 2.5 mm
2	HDMI	HDMI 2.0 output, 4096 × 2160 or 3840 × 2160 at 60 Hz
3	VGA	VGA output, 1920 × 1080 at 60 Hz
4	USB3.2	Two stacked USB 3.2 Gen 1 ports, 5 Gbps
5	LAN1	RJ45 Gigabit Ethernet port
6	LAN2	A second RJ45 Gigabit Ethernet port
7	LINE_OUT	Audio output jack (green)
8	MIC_IN	Microphone input jack (red)

5. SETTING UP

Connect and switch on

1. Place the panel PC where you will use it.
2. Connect the cable of the power adapter to the DC power socket.
3. Plug the power adapter into a power outlet.
4. Connect the keyboard and mouse to the USB ports, and the network cable to the Ethernet port if you use a wired network.
5. Press the power button to switch on the panel PC.

6. USING THE COMPUTER

Shut down

1. Save your work and close your programs.
2. Select Start, select the Power icon, then select Shut down.
3. If the panel PC does not respond, hold the power button until it switches off.

7. WI-FI

This computer has Wi-Fi (Wi-Fi 5 (802.11ac), dual band).


1. Click the network icon at the right end of the taskbar.
2. Click the name of your Wi-Fi network, then Connect, and type the network password.

8. OPERATING SYSTEM

This computer comes with Microsoft Windows 11 Pro.

1. Switch the computer on. Windows starts its setup on the first start.
2. Pick your country, keyboard layout and network, then sign in or create a local account.
3. Install the drivers in the Drivers chapter of this manual if Device Manager lists a device without a driver.

9. INSIDE THE COMPUTER: THE MOTHERBOARD

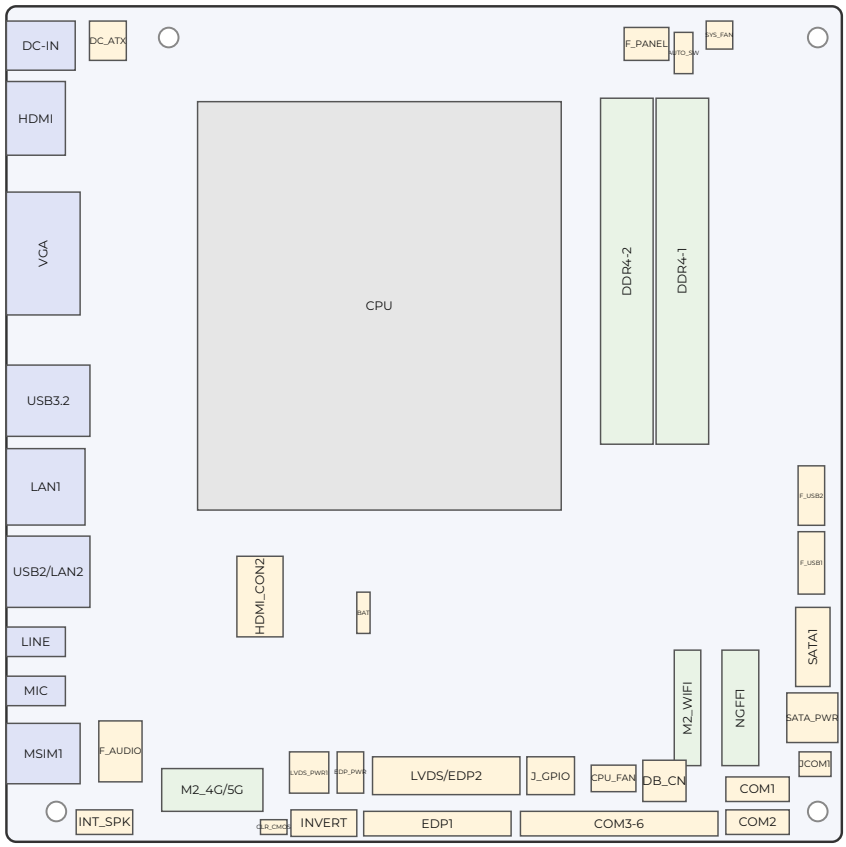

170 mm × 170 mm

Component side of the board. Positions are approximate.


Label	Connector or component
DDR4-1	DDR4 SO-DIMM slot, one of two
DDR4-2	DDR4 SO-DIMM slot, one of two
CPU	Processor under the heatsink
F_USB2	Front USB 2.0 header, two USB 2.0 ports
F_USB1	Front USB 2.0 header, two USB 2.0 ports
SATA1	SATA 3.0 data connector
SATA_PWR	Power connector for a SATA drive, 12 V and 5 V
JCOM1	Jumper header that sets the voltage on pin 9 of COM1
COM2	COM2 serial header, RS-232
COM1	COM1 serial header, RS-232, RS-422 or RS-485 set in the BIOS
NGFF1	M.2 Key-M slot for an SSD, NVMe or SATA
M2_WIFI	M.2 Key-E slot for a Wi-Fi and Bluetooth card
DB_CN	Header labelled DB_CN on the board
COM3-6	Serial header for COM3 to COM6, RS-232
J_GPIO	GPIO header, 4 inputs and 4 outputs
LVDS/EDP2	Screen header, LVDS by default or eDP2
EDP1	eDP1 screen header, 30 pins
EDP_PWR	Jumper that sets the eDP1 screen voltage
INVERT	Screen backlight power header
LVDS_PWR1	Jumper that sets the LVDS/eDP2 screen voltage
CLR_CMOS	Jumper that clears the CMOS
M2_4G/5G	M.2 Key-B slot for a 5G or 4G module
F_AUDIO	Front audio header
INT_SPK	Internal speaker header
HDMI_CON2	Second HDMI output on a 16-pin header
BAT	CMOS battery connector

AUTO_SW	Jumper for automatic power-on
F_PANEL	Front panel header with power switch, reset switch and LEDs
DC_ATX	4-pin power input
DC-IN	DC power jack, 5.5 × 2.5 mm, 12 V or 19 V
HDMI	HDMI 2.0 output
VGA	VGA output (DP output on the DP option)
USB3.2	Two stacked USB 3.2 Gen 1 ports
LAN1	RJ45 Gigabit Ethernet port, Intel I219-V
USB2/LAN2	Two stacked USB 2.0 ports on the single LAN boards, a second RJ45 port (LAN2) on the dual LAN boards
LINE	LINE_OUT audio output (green)
MIC	MIC_IN microphone input (red)
MSIM1	SIM card slot for a 5G or 4G module

10. INTERNAL CONNECTORS AND HEADERS

HDMI_CON2: Second HDMI header

16-pin, 2.0 mm header with its own HDMI signals. It supports 4096 × 2160 or 3840 × 2160 at 30 Hz. Connect the cable with its pin 1 on pin 1 of the header. A cable connected the wrong way round gives no display.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	HDMI_TXD2P	2	HDMI_TXD1P
3	HDMI_TXD2N	4	HDMI_TXD1N
5	GND	6	GND
7	HDMI_TXD0P	8	HDMI_TXC0P
9	HDMI_TXD0N	10	HDMI_TXC0N
11	GND	12	HDMI_5V
13	HDMI_CLK	14	HDMI_5V
15	HDMI_DATA	16	HDMI_HPD

EDP1: eDP1 screen header

30-pin, 2.0 mm header for an eDP-C screen cable, which carries the backlight on the same cable. It supports 4096 × 2160 or 3840 × 2160 at 60 Hz. Connect the cable with its pin 1 on pin 1 of the header. A cable connected the wrong way round can burn the screen and the board.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	VCC	2	VCC
3	GND	4	GND
5	TX0P	6	TX0N
7	GND	8	GND
9	TX1P	10	TX1N
11	GND	12	GND
13	TX2P	14	TX2N
15	GND	16	GND
17	TX3P	18	TX3N
19	GND	20	GND
21	AUXP	22	AUXN
23	GND	24	HPD
25	BKLT_CTL	26	BKLT_EN
27	GND	28	GND
29	BLPWR	30	BLPWR

LVDS/EDP2: Screen header, eDP2 signals

30-pin, 2.0 mm header. The board ships with LVDS on it; the eDP2 option uses the same pins and an eDP-B screen cable (20 pins, backlight on a separate cable). Pins 21 to 30 carry no signal in eDP2 mode. eDP2 supports 4096 × 2160 or 3840 × 2160 at 60 Hz.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	VCC	2	VCC
3	VCC	4	HPD
5	GND	6	GND
7	TX0N	8	TX0P
9	TX1N	10	TX1P
11	TX2N	12	TX2P
13	GND	14	GND
15	AUX-	16	AUX+
17	TX3N	18	TX3P
19	NC	20	NC

LVDS/EDP2: Screen header, LVDS signals

The same header with LVDS signals, which supports 2K at 60 Hz. Connect the screen cable with its pin 1 on pin 1 of the header. A cable connected the wrong way round can burn the screen and the board.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	VCC	2	VCC
3	VCC	4	GND
5	GND	6	GND
7	ADO0-	8	ADO0+
9	ADO1-	10	ADO1+
11	ADO2-	12	ADO2+
13	GND	14	GND
15	ACLK-	16	ACLK+
17	ADO3-	18	ADO3+
19	BDO0-	20	BDO0+
21	BDO1-	22	BDO1+
23	BDO2-	24	BDO2+
25	GND	26	GND
27	BCLK-	28	BCLK+
29	BDO3-	30	BDO3+

INVERT: Backlight power header

6-pin, 2.0 mm header for the LVDS backlight.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	+12V	2	+12V
3	ON/OFF (backlight switch)	4	ADJ (backlight brightness)
5	GND	6	GND

J_GPIO: GPIO header

10-pin, 2.0 mm header. The direction of each GPIO pin can be changed on request.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	GND	2	+5V
3	GPIO_IN0	4	GPIO_OUT0
5	GPIO_IN1	6	GPIO_OUT1
7	GPIO_IN2	8	GPIO_OUT2
9	GPIO_IN3	10	GPIO_OUT3

COM1 / COM2: Serial port headers

Two 10-pin, 2.54 mm headers with the same pin order. COM1 is RS-232, RS-422 or RS-485 and the BIOS sets the mode. COM2 is RS-232 only. In RS-485 mode on COM1, pin 1 is S485- and pin 2 is S485+. In RS-422 mode on COM1, pin 1 is TXD-, pin 2 is TXD+, pin 3 is RXD+ and pin 4 is RXD-. The pin table below is for RS-232.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	NC

COM3-6: Serial port header for COM3 to COM6

40-pin, 2.0 mm header with four RS-232 ports, 10 pins each. It is fitted on the 6-COM boards.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	COM3_DCD	2	COM3_RXD
3	COM3_TXD	4	COM3_DTR
5	GND	6	COM3_DSR
7	COM3_RTS	8	COM3_CTS
9	COM3_RI	10	NC
11	COM4_DCD	12	COM4_RXD
13	COM4_TXD	14	COM4_DTR
15	GND	16	COM4_DSR
17	COM4_RTS	18	COM4_CTS
19	COM4_RI	20	NC
21	COM5_DCD	22	COM5_RXD
23	COM5_TXD	24	COM5_DTR
25	GND	26	COM5_DSR
27	COM5_RTS	28	COM5_CTS
29	COM5_RI	30	NC
31	COM6_DCD	32	COM6_RXD
33	COM6_TXD	34	COM6_DTR
35	GND	36	COM6_DSR
37	COM6_RTS	38	COM6_CTS
39	COM6_RI	40	NC

F_USB1 / F_USB2: Front USB 2.0 headers

Two 10-pin, 2.54 mm headers with the same pin order. Each header carries two USB 2.0 ports.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	VCC+5V	2	VCC+5V
3	DATA0-	4	DATA1-
5	DATA0+	6	DATA1+
7	GND	8	GND
9	NC	10	GND

F_AUDIO: Front audio header

10-pin, 2.54 mm header.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	MIC-L	2	GND
3	MIC-R	4	NC
5	LINE OUT-R	6	MIC_JD
7	FAUDIO_JD	8	NC
9	LINE OUT-L	10	LINE_JD

INT_SPK: Internal speaker header

4-pin, 2.0 mm header for a speaker with an amplifier, 5 W.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	L+	2	L-
3	R-	4	R+

DC_ATX: 4-pin power input

Second power input, 4.2 mm pitch. Use it instead of the DC jack.




Pin 1 is square.

Pin	Signal	Pin	Signal
1	GND	2	GND
3	+12V	4	+12V

F_PANEL: Front panel header

10-pin, 2.54 mm header. Pins 1 and 3 take the hard disk LED, with pin 1 the positive end; the LED flashes while the drive works. Pins 2 and 4 take the power LED, with pin 2 the positive end; the LED is lit while the board has power. Pins 5 and 7 take a reset switch. Pins 6 and 8 take the power switch. The board also has its own power switch.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	HDLED+	2	PWRLED+
3	HDLED-	4	GND
5	RST	6	P_SW IN
7	GND	8	GND
9	NC		

SATA: SATA data connector

7-pin SATA 3.0 connector, up to 6 Gbps.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	GND	2	SATA_TXP
3	SATA_TXN	4	GND
5	SATA_RXN	6	SATA_RXP
7	GND		

SATA_PWR: SATA power connector

4-pin, 2.54 mm connector. Pin 1 outputs 12 V and pin 4 outputs 5 V. Use the power cable Thinvent supplies; a different cable can burn the drive.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	+12V	2	GND
3	GND	4	+5V

BAT: CMOS battery connector

2-pin, 1.25 mm connector for the coin cell.



Pin 1 is square.

Pin	Signal	Pin	Signal
1	Negative	2	Positive

11. JUMPERS AND SWITCHES

EDP_PWR: eDP1 screen voltage

Setting	Function
1-2	+3.3 V
3-4	+5 V
5-6	+12 V

LVDS_PWR1: LVDS/eDP2 screen voltage

Setting	Function
1-2	+3.3 V
3-4	+5 V
5-6	+12 V

JCOM1: Voltage on pin 9 of COM1

Setting	Function
1-2	+5 V on pin 9
3-4	+12 V on pin 9
5-6	No voltage on pin 9 (0 V) (default)

AUTO_SW: Automatic power-on

Setting	Function
1-2	Automatic power-on off
2-3	Automatic power-on on

CLR_CMOS: Clear CMOS

Setting	Function
1-2	Normal start (default)
2-3	Clears the CMOS and sets the BIOS to its factory settings

12. BIOS SETUP

Press **Del** right after power-on to open BIOS setup. Open the Save & Exit menu to save the settings and restart, or press **F10**. Press **F9** to load the default settings.

Updating the BIOS

> Keep the power connected during a BIOS update. A power cut during the update leaves the board unable to start.

1. Email Thinvent support at support@thinvent.in with the serial number of your device to get the BIOS update for this board. Thinvent support sends the BIOS file and the steps for your board.
2. Keep the power adapter connected during the update.

13. DRIVERS

Install the drivers in this order. Each one is on the Support Downloads page.

#	Driver	Version
1	Intel Chipset INF Utility for Windows 10 and 11	10.1.20658.8883
2	Intel graphics driver (11th-14th Gen and N-series) for Windows 10 and 11	31.0.101.7092
3	Intel Ethernet driver (I219-V) for Windows 10 and 11	31.2.2
4	Realtek audio driver (UAD) for the i3-1215U board	6.0.9597.1
5	Intel Bluetooth driver (Wireless-AC 8260, 8265, 9560 and Wi-Fi 6 AX200) for Windows 10 and 11	22.200.0
6	Intel Wi-Fi driver (Wireless-AC 8260, 8265, 9560 and Wi-Fi 6 AX200) for Windows 10 and 11	22.200.2
7	Intel Smart Sound Technology driver	10.29.00.8102

Other files for this computer

These files are on the Support Downloads page, www.thinvent.in/support/downloads.

File	Kind	Version
Realtek Audio Console	utility	1.48.312.0

14. CARE

- Switch off the panel PC and unplug the power adapter before you clean it.
- Wipe the screen with a soft, lint-free cloth moistened with an alcohol-free glass cleaner.
- Do not spray liquid on the panel PC and do not use strong solvents.

15. TROUBLESHOOTING

The panel PC does not switch on

1. Check that the power adapter is plugged firmly into the panel PC and into the outlet.
2. Plug a different device into the same outlet to test it.
3. Disconnect every USB device and the network cable.
4. Hold the power button for 15 seconds until the panel PC switches off, then press it once to switch on.
5. If it still does not start, contact Thinvent Support with the serial number.

The screen is blank

1. Press the power button to switch on the panel PC.
2. Touch a key or move the mouse in case the panel PC is asleep.
3. If you use a second screen on the HDMI or VGA port, check that its cable is firmly connected.

The panel PC does not respond

1. Press Ctrl, Alt and Delete together, select Task Manager, select the program that does not respond, then select End task.
2. If that does not help, restart from the Power icon.
3. As a last step, hold the power button until the panel PC switches off, then switch it on again.

16. SUPPORT

Support Downloads	www.thinvent.in/support/downloads
Email	support@thinvent.in
Phone	+91-11-411-71494
WhatsApp	+91 9990344247

Thinvent® is a registered trademark of Thinvent Technologies Private Limited. Intel, Core, Celeron, AMD Ryzen, Microsoft and Windows are trademarks of their owners. The information in this manual is subject to change without notice.